



Rustic Candleholder

Free Plans to build your own Candleholder



MATERIALS & TOOLS

TOOLS:

- Jigsaw, table saw, miter saw, or hand saw
- Brad nailer
- Drill
- Pencil, ruler, square
- Tape measure
- Sander
- Iron for edge banding
- Edge banding trimmer or craft knife

MATERIALS:

- 1" brad nails
- Edge banding, optional
- Wood glue
- Sandpaper (100, 150, 220 grits)
- Finishing supplies (primer & paint, or stain, sealer)
- Paste wax


Lumber:

- One - 2' x 4' x 1/2" PureBond plywood project panel - one panel will yield four candleholders (Mahogany was used in the example)

Cut List:

- Two - 1/2" PureBond plywood project panel at 3" x 22-1/2" - Front & Back
- Two - 1/2" PureBond plywood project panel at 3" x 2-1/4" - Sides
- One - 1/2" PureBond plywood project panel at 2-1/4" x 21-1/2" - Bottom
- Seven - 1/2" PureBond plywood project panel at 2-1/4" x 2-1/2" - Dividers

Notes: Edge banding to cover the exposed edges of the plywood is optional and will be applied before assembly. If using edge banding, it will be easier to cut a 2-1/4" x 24" piece for the dividers, apply the edge banding, then cut it into segments.

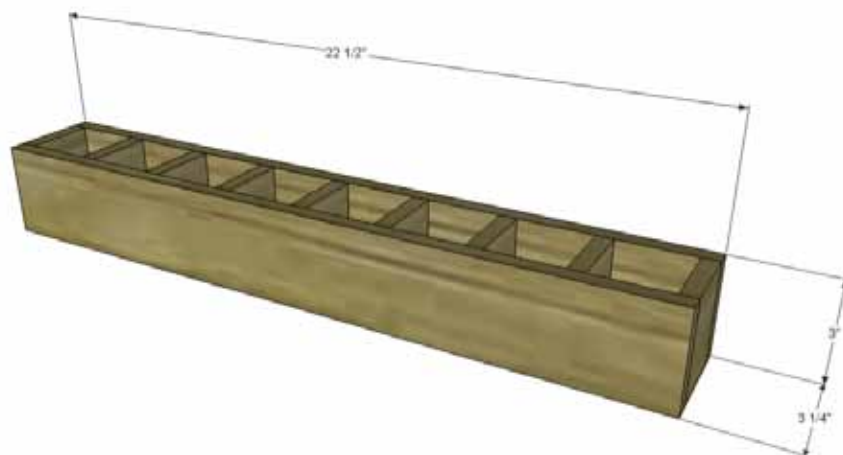

FEATURING
PureBond®
FORMALDEHYDE-FREE TECHNOLOGY



Rustic Candleholder



STEP 1


Cut the pieces for the front and back, as well as the bottom and sides. Secure the sides to the back piece using glue and 1" brad nails. Secure the bottom to the sides and back piece using glue and 1" brad nails.

STEP 2

Cut the pieces for the dividers. The dividers will be evenly spaced at 2-1/4". Secure in place using glue and 1" brad nails.

STEP 3

Attach the front using glue and 1" brad nails.

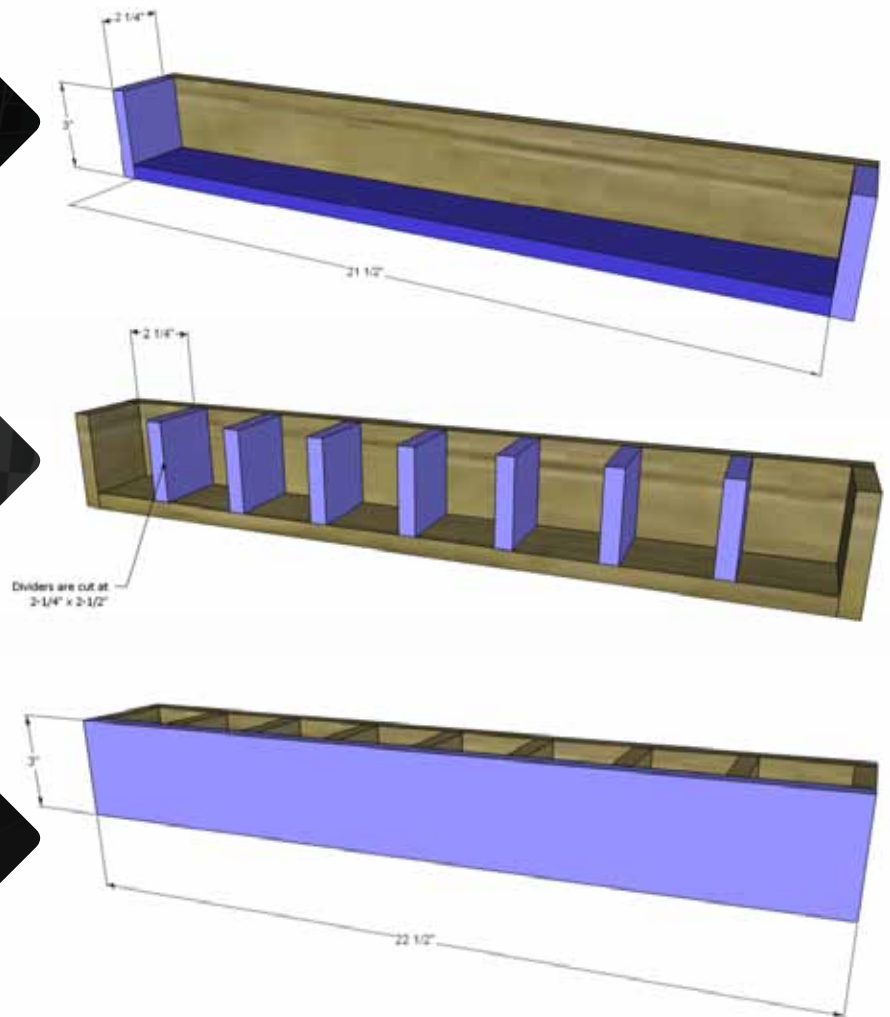

FEATURING

PureBond.

FORMALDEHYDE-FREE TECHNOLOGY

Available at most Home Depot stores.